

[View Forum Message](#) <> [Reply to Message](#)

[View Forum Message](#) [Reply to Message](#)

The PARIS Forums

> > >>>>> error message "USB device over current status detected". Then the
> > >>>>> computer shuts down. Won't boot up, won't let me go to BIOS to
fix
> > >>>>> it.
> > >>>>>
> > >>>>> Heeeeeeeelp!
> > >>>>>
> > >>>>>
> > >>>>> "John" <no@no.com> wrote in message news:450b3aac\$1@linux...
> > >>>>>> It looks like another messed up Asus manual. I downloaded the
> > >>>>>> manual and on page 2-18 it has that pic. I would turn off Com1
> > >>>>>> (irq4), floppy (irq 6), lpt1 (irq 7), Serial port, turn off
> onboard
> > >>>>>> audio and USB, Keep the LAN on so you can network but I would
try
> > >>>>>> only slots 3 and 4 only first. Notice how they don't even show
> audio
> > >>>>>> sharing with anything. This diagram is craptastic.
> > >>>>>>
> > >>>>>> And turn off Hyper Threading.
> > >>>>>>
> > >>>>>> Do ME and favor and call them on the phone and ask then what the
> > >>>>>> hell is this diagram means. Simply, what slots share with
what?
> > >>>>>> Inquiring minds !
> > >>>>>>
> > >>>>>> John
> > >>>>>>
> > >>>>>> Uptown Jimmy wrote:
> > >>>>>>> I guess I don't understand what the Alphabetized row indicates.
> In
> > >>>>>>> other
> > >>>>>>> words, if PCI slot 1 "shared" with 'F', what does that mean?
What
> > >>>>>>> is it
> > >>>>>>> shared with?
> > >>>>>>>
> > >>>>>>>
> > >>>>>>> "John" <no@no.com> wrote in message
